



# Cingular 8125 Battery Replacement

This guide will show how to remove and/or replace the battery.

Written By: Laura Kimberly Simonds

## Step 1 — Battery



- Hold the phone with the back (camera side) facing you. Slide the battery cover off of the phone.

## Step 2



- Pull the battery out by lifting the black tab on the left side of the battery.

## Step 3



- Line the copper terminal on the battery with the terminal in the phone and push into place. Make sure the black tab sticks out.

## Step 4



- Slide the silver back cover onto the phone.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-25 04:52:47 PM.